


WELCOME

Congratulations on purchasing the Addvalue's Wideye™ iSavi™ satellite terminal.

SHARE ACCESS TO DATA

Devices connected to your iSavi™ satellite terminal over Wi-Fi can access data and calls.

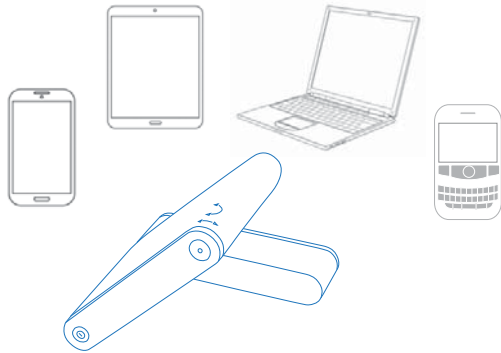

CONTROL SHARED ACCESS

The features of your iSavi™ terminal can be conveniently controlled remotely.



Use a tablet or smart phone to share and control data access*.



For control of your iSavi™: IsatHub Control app
For satellite calls: IsatHub Voice app

DOWNLOAD NOW



Apps are available for iOS & Android.

Alternatively use any web browser to control your iSavi™ satellite terminal.




* Apps are supplied by Inmarsat

QUICK REFERENCE

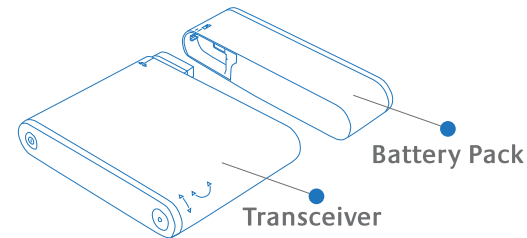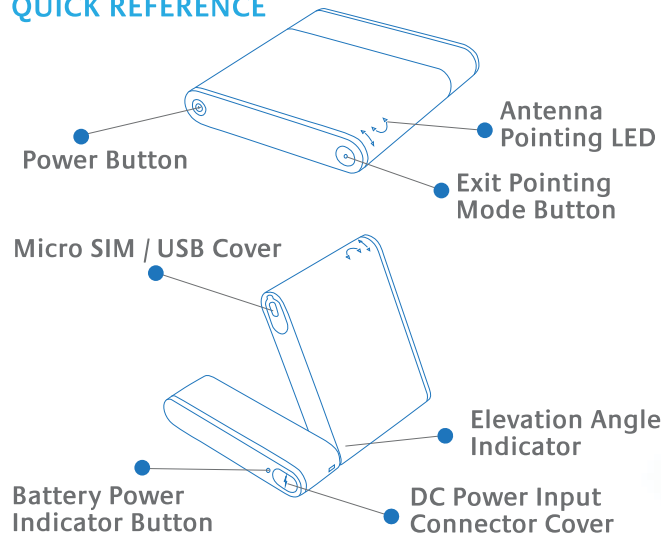


Other contents in the box

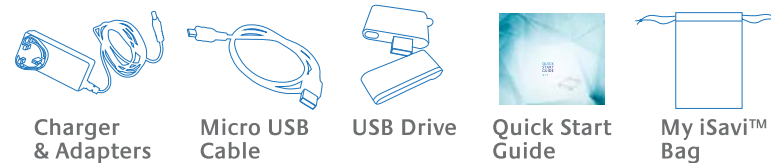


GET STARTED

Insert the Micro-SIM card with its gold-contacts facing down.

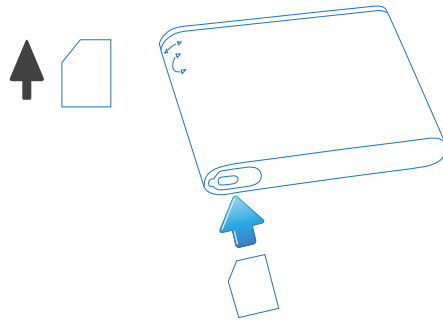

Attach battery

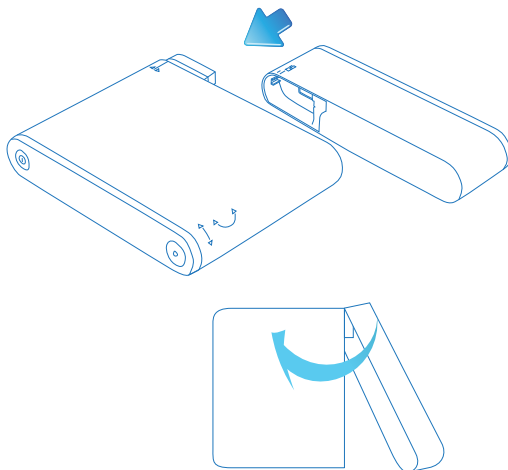



Attach the battery gently in the direction as shown until a click is heard.

Insert charger lead and then plug the adapter.

Your iSavi™ should be charged for eight hours before first use.

Charging will cease automatically once the battery is fully charged.

You can check the battery level by pressing the 'Battery Power Indicator Button'.

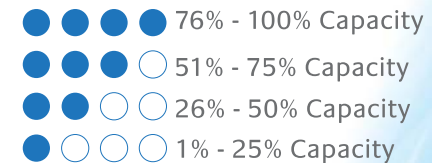
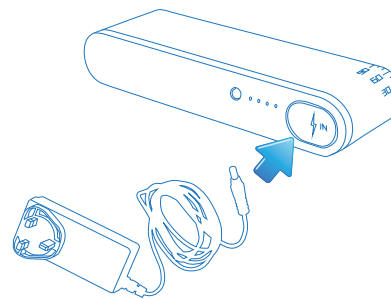


Note: The charging time will be longer when iSavi™ is switched ON

After charging, place your iSavi™ outside in a position with a clear view of the sky.



Switch your iSavi™ on and leave it for a minimum of 5 minutes.

Your iSavi™ must acquire a GPS fix before you can connect to the network for the first time.

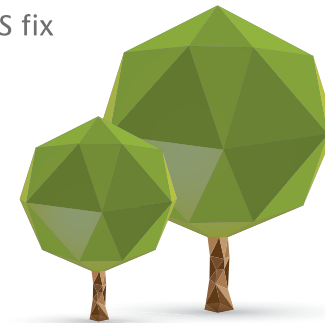
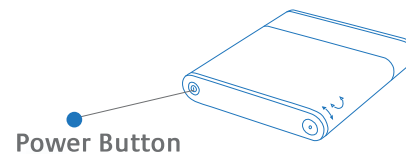


POINT THE TERMINAL AND CONNECT TO NETWORK



Make sure you place your iSavi™ in the open air, with a clear view of the sky. Your iSavi™ needs to be pointed towards the sky in the correct direction to ensure connection to the satellite network.

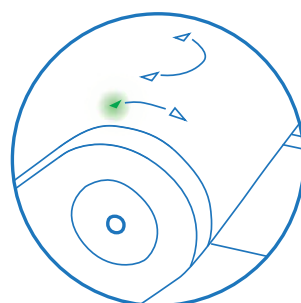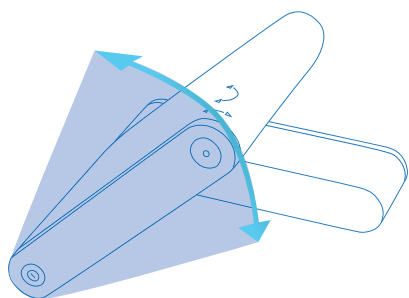

Tilt your iSavi™ up or down in the direction of the flashing green light until both 'up' and 'down' LEDs are solid green.

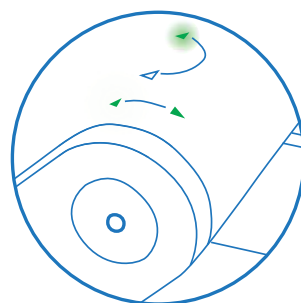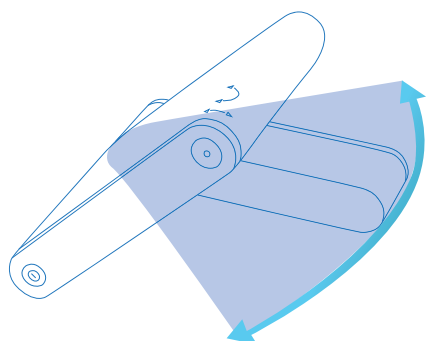

Turn your iSavi™ left or right in the direction of the flashing green light until both 'left' and 'right' LEDs are solid green.

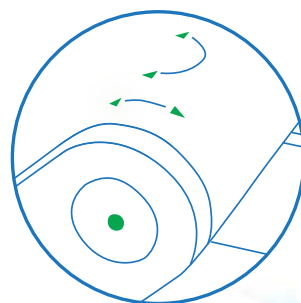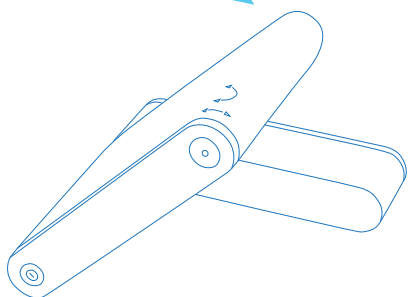

When all four tilt & turn LEDs are solid green, press the flashing 'Exit Pointing Mode' Button. Your iSavi™ will now connect to the network.

If the LEDs display any other pattern of illumination refer to the User Guide for full instructions



For safety reasons, never stand closer than one metre in front of your iSavi™ terminal's transceiver when it is connected to the network.

ACCESSING DATA AND CALLS

STEP 1

Connect to your iSavi™ over Wi-Fi by selecting it from the list of available Wi-Fi networks.

The default Wi-Fi network name (SSID) and password can be obtained from the product label on the back of the iSavi™ terminal.



Note:
For your security,
please change the
Wi-Fi password at the
first opportunity.

STEP 2

For smart device control of your iSavi™, open the IsatHub Control app and follow the instructions presented to get started.

iOS and Android apps are available from App Store and Google Play respectively.



For control of your iSavi™ over web browser, access the web console by opening any web browser and type <http://192.168.1.35> (<http://iSavi>) into the address bar.



STEP 3

To access your chosen control interface, the default credentials are:

USERNAME: admin
PASSWORD: 1234

For details, please refer
to iSavi™ User Guide

STEP 4


Once your iSavi™ is connected to the network, you are ready to start making and receiving calls on any iOS or Android smart device.



The IsatHub Voice app is available from App Store and Google Play. It is advised to install the application before connecting to the iSavi™ satellite terminal.



When you first access data over the network, you may need to enter the APN username and password supplied to you with your SIM card by your service provider. Please make sure you have these available if required.



STEP 5

Once your iSavi™ is connected to the network, you are ready to start a data session. Press the 'Data On' button to begin and 'Data Off' to end all connection to the Internet.



The web console provides data access through the 'Activate data connection' button on the Home page.



To stop access to data press 'Deactivate data connection'

For details, please refer to iSavi™ User Guide